

SERVICE BULLETIN

ADVISE FOR REMOVING THE INNER DOOR IN THE MW OVENS

The inner door (frame) is clipped to the metallic door. To disengage the clips, we suggest you to use a tool similar to the one indicated below and then proceed chronologically as shown in the following pictures.

The tool:



We strongly advise you to wear GLOVES.


Insert the tool between the inner door and the metallic door beginning with the upper corner near the hinge shaft.

Pull the door inner towards left with your left thumb.



Pull the tool toward you while simultaneously pulling the frame to the left.

The difficulty is to avoid that the frame retakes its position.

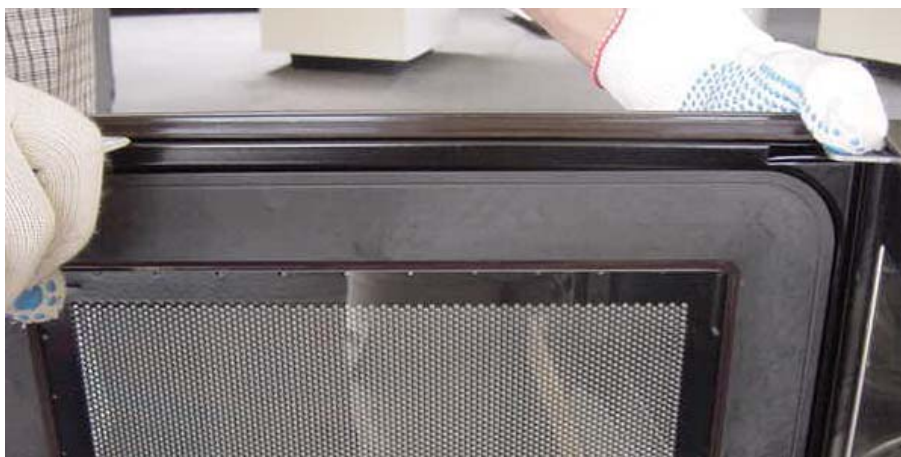

Then insert the tool all around the frame as shown in the following pictures.



Between the inner door and the frame.

Finally the inner door is detached.



Another way is to use a ruler.



Table 1 – Affected models.

MODEL	PNC	FACTORY CODE	BRAND	PRODUCTION DATE	NO. PUBLICATION
MC17W	947001003	P111AGD0P	AEG	19990606	599506589
MC143E/U-D	947001230	P11AAGD0I	AEG	19990606	599506562
MC143E/U-W	947001231	P11AAGD1I	AEG	19990606	599506562
MC143E/U-B	947001232	P11AAGD2I	AEG	19990606	599506562
MC143E/U-M	947001233	P11AAGD3I	AEG	19990606	599506562
MC143E/U-P	947001234	P11AAGD4I	AEG	19990606	599506562
MC153E-D	947001370	P21AAGD0P	AEG	19990101	599506368
MC153E-W	947001371	P21AAGD1P	AEG	19990101	599506368
MC153E-B	947001372	P21AAGD2P	AEG	19990101	599506368
MC153E-M	947001373	P21AAGD3P	AEG	19990101	599506368
MCD17-W	947002003	P121AGD0I	AEG	19990606	599506591
MCD343E/U-D	947002230	P12AAGD0I	AEG	19990606	599506572
MCD343E/U-W	947002231	P12AAGD1I	AEG	19990606	599506572
MCD343E/U-B	947002232	P12AAGD2I	AEG	19990606	599506572
MCD343E/U-M	947002233	P12AAGD3I	AEG	19990606	599506572
MCD3534E-D	947002314	P22AAGD0I	AEG	19990101	599506378
MCD3534E-W	947002315	P22AAGD1I	AEG	19990101	599506378
MCD3534E-B	947002316	P22AAGD2I	AEG	19990101	599506378
MCD3534E-M	947002317	P22AAGD3I	AEG	19990101	599506378
MCD3534E-P	947002318	P22AAGD4I	AEG	19990101	599506378
JMW100S	947602202	P111JUD2P	JUNO	19991212	599507213
JMW100W	947602203	P111JUD1P	JUNO	19991212	599507213
JMW100E	947602204	P111JUD3P	JUNO	19991212	599507213
JMW100B	947602205	P111JUD0P	JUNO	19991212	599507213
ZMB17M-X	947602207	P111ZAD0P P111ZAD0P	ZANUSSI	19991212	599507250
ZMB17M-W	947602208	P111ZAD0P	ZANUSSI	20000801	599509147
MC 143E/U-W (UK)	947602234	P11AAGG1P	AEG	20000202	599507385
MC 143E/U-M (UK)	947602235	P11AAGG2P	AEG	20000202	599507385
MC143E/U-D	947602236	P11AAGG0P	AEG	20000202	599507385
MC 143E/U-W	947602240	P11AAGY1P	AEG	20000202	599507392
MC143E/U-B	947602241	P11AAGY2P	AEG	20000202	599507392
MC143E/U-D (EUR)	947602242	P11AAGY0P	AEG	20000202	599507392
MC 143E/U-M	947602243	P11AAGY3P	AEG	20000202	599507392
MC143E/U-W (CH)	947602246	P12AAGY0I	AEG	20000303	599507683
MC143E/U-B (CH)	947602247	P12AAGY1I	AEG	20000303	599507683
MC143E/U-M (CH)	947602248	P12AAGY2I	AEG	20000303	599507683
MC153E-W / UK	947602249	P21AAGG1P	AEG	19991212	599507219
MC153E-B / UK	947602250	P21AAGG2P	AEG	19991212	599507219
MC153E-D / UK	947602251	P21AAGG0P	AEG	19991212	599507219
MC153E-M / UK	947602252	P21AAGG3P	AEG	19991212	599507219
MC153E-W / CH	947602253	P21AAGC0P	AEG	20000303	599507646
MC153E-B / CH	947602254	P21AAGC0P	AEG	20000303	599507646
MC153E-M / CH	947602255	P21AAGC2P	AEG	20000303	599507646
MC153E-W / EX	947602256	P21AAGX1P	AEG	20000202	599507623
MC153E-B / EX	947602257	P21AAGX2P	AEG	20000202	599507623
MC153E-M / EX	947602258	P21AAGX3P	AEG	20000202	599507623
MCD3534E-W / UK	947602259	P21AAGG1I	AEG	20000202	599507387
MCD3534E-B / UK	947602260	P21AAGG2I	AEG	20000202	599507387
MCD3534E-M / UK	947602262	P21AAGG3I	AEG	20000202	599507387
MCD3534E-W / EX	947602263	P21AAGX0I	AEG	20000202	599507628
MCD3534E-B / EX	947602264	P21AAGX1I	AEG	20000202	599507628
MC153E-D / UK	947602265	P21AAGX0P	AEG	20000202	599507623
MCD3534E-M / EX	947602266	P21AAGX2I	AEG	20000202	599507628
QN4038X	947602267	P21AHUW0P	HUSQVARNA	20001001	599509351
QN4020W	947602268	P11AHUS0P	HUSQVARNA	20000505	599508173
QN 4020K	947602269	P11AHUS1P	HUSQVARNA	20000505	599508173
QN 4020X	947602270	P11AHUS2P	HUSQVARNA	20000505	599508173
ZM24STX	947602272	P21AZAH1P	ZANUSSI	20000801	599509231

ZM24STN	947602275	P21AZAH0P	ZANUSSI	20000801	599509231
EMS2485W	947602276	P22AEXX0I	ELECTROLUX	20000801	599509225
EMS2485K	947602277	P22AEXX1I	ELECTROLUX	20000801	599509206
EMS2485X	947602278	P22AEXX2I	ELECTROLUX	20000801	599509227
EMS2485W	947602279	P22AEXG1I	ELECTROLUX	20000801	599509225
EMS2485B	947602280	P22AEXG0I	ELECTROLUX	20000801	599509206
EMS2485X	947602281	P22AEXG2I	ELECTROLUX	20000801	599509227
EMS2486CWE	947602282	P22AEX10I	ELECTROLUX	20010601	599512053
EMS2486CSW	947602283	P22AEX12I	ELECTROLUX	20010601	599512053
EMS2486CCN	947602284	P22AEX11I	ELECTROLUX	20010601	599512053
MCD 343E/U-M	947602288	P12AAGG0I	AEG	20000202	599507635
MO924GNE	947602289	P22ARXL0I	REX	20001001	599509410
MO924GXE	947602290	P22ARXL1I	REX	20001001	599509410
ZM24STW	947602292	P21AZAG0P	ZANUSSI	20001001	599509292
ZM24STX	947602293	P21AZAG1P	ZANUSSI	20001001	599509292
MC 143E/U-M	947602296	P11AAGD5I P11AAG11P	AEG	20000801	599509251
MC 143E/U-M	947602297	P11AAGG3P P11AAG12P	AEG	20000801	599509251
MC 143E/U-M	947602298	P11AAGY4P P11AAG13P	AEG	20000801	599509251
MC 143E/U-M	947602299	P11AAGD4I P11AAG10I	AEG	20000801	599509251
MCD 343E/U-M	947602301	P12AAG12I	AEG	20000801	599509179
MCD343E/U-M	947602302	P12AAGG1I P12AAG11I	AEG	20000801	599509179
MC153EM	947602303	P21AAGD4P P21AAG11P	AEG	20001201	599506368
MC153EM / UK	947602304	P21AAGG4P P21AAG12P	AEG	20001201	599507219
MC153EM / CH	947602305	P21AAGC3P P21AAG10P	AEG	20001201	599507646
MC153EM / EX	947602306	P21AAGX4P P21AAG13P	AEG	20001201	599507623
MCD3534EM	947602307	P22AAGD5I P22AAG10I	AEG	20001201	599506378
MCD3534EM / UK	947602308	P22AAGG4I P22AAG11I	AEG	20001201	599507387
MCD3534EM / EX	947602309	P22AAGX3I P22AAG12I	AEG	20001201	599507628
JMW 100-E	947602310	P111JUD4P	JUNO	20001201	599507213
QN 4020X	947602311	P11AHUS3P	HUSQVARNA	20001201	599508173
MCC663E-W	947602313	P33BAG12I	AEG	20010601	599510792
MCC663E-B	947602314	P33BAG14I	AEG	20010601	599510792
MCC663E-M	947602315	P33BAGX0I P33BAG17I	AEG	20010601	599510792
MCC663E-AL	947602317	P33BAG10I	AEG	20010601	599512134
MCC663E-W	947602318	P33BAG11I	AEG	20010601	599510792
MCC663E-M	947602320	P33BAGG0I P33BAG16I	AEG	20010601	599510792
MC143E/U-A	947602321	P11AAG10P	AEG	20010401	599509251
JMW 1000W	947602322	P111JU11P	JUNO	20010701	599512101
JMW 1000S	947602323	P111JU12P	JUNO	20010701	599512101
JMW 1000B	947602324	P111JU10P	JUNO	20010701	599512101
JMW 1000E	947602325	P111JU13P	JUNO	20010701	599512101
JMW2100W	947602326	P21AJU11P	JUNO	20010801	599512315
JMW2100-S	947602327	P21AJU12P	JUNO	20010801	599512315
JMW2100-B	947602328	P21AJU10P	JUNO	20010801	599512315
JMW2100-E	947602329	P21AJU13P	JUNO	20010801	599512315
JMW9110E	947602330	P21AJU10I	JUNO	20010801	599512327
ZM24STN	947602336	P21AZAG2P	ZANUSSI	20001101	599509231
JMW 1000A	947602339	P111JU14P	JUNO	20010701	599512101
ZMB30CST-W / EX	947602341	P33BZA10I	ZANUSSI	20010601	599511585
ZMB30CST-X / EX	947602343	P33BZA12I	ZANUSSI	20010601	599511585
ZMB30CST-W / UK	947602344	P33BZA14I	ZANUSSI	20010601	599511587
ZMB30CST-X / UK	947602346	P33BZA16I	ZANUSSI	20010601	599511587

ZM24STW	947602349	P21AZAH2P	ZANUSSI	20001101	599509231
MCC663E-A	947602354	P33BAG15I	AEG	20010601	599512134
EMS1776WE	947602359	P12AEX11I	ELECTROLUX	20010501	599511612
EMS1776SW	947602360	P12AEX10I	ELECTROLUX	20010501	599511612
QN4038W	947602361	P21AHU10P	HUSQVARNA	20010601	599512130
QN4038K	947602362	P21AHU11P	HUSQVARNA	20010601	599512130
EM2412-W	947602368	P21AAM10P	ARTUR MARTIN	20010801	599512345
EM2412-B	947602369	P21AAM12P	ARTUR MARTIN	20010801	599512345
EM2412-X	947602370	P21AAM11P	ARTUR MARTIN	20010801	599512345
EG2428-W	947602371	P22AAM10I	ARTUR MARTIN	20010801	599512331
EG2428-B	947602372	P22AAM12I	ARTUR MARTIN	20010801	599512331
EG2428-X	947602373	P22AAM11I	ARTUR MARTIN	20010801	599512331
MC143/U-W	947602428	P11AAG15P	AEG	20020715	599353380
MC 143E/U-W (UK)	947602429	P11AAG19P	AEG	20020723	599353672
MC143E/U-B	947602430	P11AAG16P	AEG	20020715	599353379
MC143E/U-B	947602431	P11AAG14P	AEG	20020724	599353722
MC143E/U-M	947602432	P11AAG17P	AEG	20020715	599353378
MC143E/U-M	947602433	P11AAG20P	AEG	20020724	599353690
MC143EUA	947602434	P11AAG21P	AEG	20020715	599353376
MCD343E/U-W	947602435	P12AAG17I	AEG	20020729	599353859
MCD343E/U-W (CH)	947602436	P12AAG13I	AEG	20020726	599353793
MCD343E/U-B	947602437	P12AAG18I	AEG	20020729	599353871
MCD343E/U-B (CH)	947602438	P12AAG14I	AEG	20020729	599353807
MCD343E/U-D	947602439	P12AAG16I	AEG	20020729	599353808
MCD343E/U-M	947602440	P12AAG19I	AEG	20020729	599353872
MCD343E/U-M	947602441	P12AAG20I	AEG	20020729	599353878
MCD343E/U-M	947602442	P12AAG15I	AEG	20020729	599353809
QN4020W	947602443	P11AHU10P	AEG	20020801	599353995
QN 4020K	947602444	P11AHU11P	AEG	20020801	599353996
QN 4020X	947602445	P11AHU12P	AEG	20020805	599354000
ZMB 17M-W	947602446	P111ZA11P	ZANUSSI	20020805	599354011
ZMB 17M-X	947602448	P111ZA10P	ZANUSSI	20020805	599354010
JMW 1000W	947602449	P111JU16P	JUNO	20020805	599354047
JMW 1000S	947602450	P111JU17P	JUNO	20020805	599354053
JMW 1000B	947602451	P111JU15P	JUNO	20020805	599354022
JMW 1000E	947602452	P111JU18P	JUNO	20020805	599354054
JMW 1000A	947602453	P111JU19P	JUNO	20020805	599354056
MCD 3534 E-D	947602475	P22AAG13I	AEG	--	--
EMS1776WE	947602477	P12AEX13I	ELECTROLUX	20020826	599354298
EMS1776SW	947602478	P12AEX12I	ELECTROLUX	20020826	599354299
MW2401-W	947602482	P22AEX13I	THERMA	20011201	599512952
MW2401-B	947602483	P22AEX15I	THERMA	20011201	599512952
MW2401-E	947602484	P22AEX14I	THERMA	20011201	599512952
EMS2487W	947602509	P22AEX16I	ELECTROLUX	2003	--
EMS2487K	947602510	P22AEX17I	ELECTROLUX	2003	--
EMS2487X	947602511	P22AEX18I	ELECTROLUX	2003	--
EMS2487W	947602512	P22AEX19I	ELECTROLUX	2003	--
EMS2487B	947602513	P22AEX20I	ELECTROLUX	2003	--
EMS2487X	947602514	P22AEX21I	ELECTROLUX	2003	--
MC143E/U-A	947602515	P11AAG18P	AEG	20020715	599353369
QN4021W	947602522	P11AHU13P	HUSQVARNA	--	--
QN4021K	947602523	P11AHU14P	HUSQVARNA	--	--
QN4021X	947602524	P11AHU15P	HUSQVARNA	--	--
QN4039W	947602525	P21AHU12P	HUSQVARNA	2003	--
QN4039K	947602526	P21AHU13P	HUSQVARNA	2003	--
QN4039X	947602527	P21AHU14P	HUSQVARNA	2003	--
MCC663EW	947602538	P33BAG18I	AEG	--	--
MCC663EB	947602539	P33BAG19I	AEG	--	--
MCC663E-M	947602540	P33BAG20I	AEG	--	--
MCC663EA	947602541	P33BAG21I	AEG	--	--
MCC663EW	947602542	P33BAG22I	AEG	--	--
MCC663EB	947602543	P33BAG23I	AEG	--	--

MCC663EB	947602544	P33BAG24I	AEG	--	--
MC143EUA	947602545	P11AAG22P	AEG	--	--
ZMB30CSTN	947602547	P33BZA11I	ZANUSSI	--	--
ZMB30CST-N / EX	947602547	P33BZA11I P33BZA18I	ZANUSSI	--	--
ZMB30CSTX	947602548	P33BZA17I	ZANUSSI	--	--
MCC663EA	947602549	P33BAG25I	AEG	--	--