


SERVICE BULLETIN
Porcia Factory, Italy

COMING OUT OF THE MOTORFAN BELT

In the appliances produced between the Serial Number 638... and 703... the motor fan belt (253) may come out.

This is due to an incorrect alignment between the fan assembly pulley (18) and the motor fan pulley (4).

To solve this problem, it is necessary to replace the fan assembly (18). The part no. can be found in the Service Notes relative to the appliance and the warehouse will send you the spare part already modified.

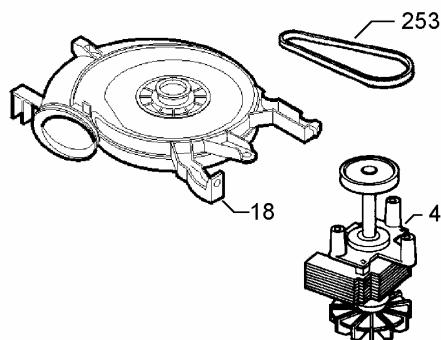

The affected models are listed in the following page:

Affected models

Brand	Model	P.N.C.	Service Notes
AEG Electrolux	L12710VIT	914 60 12 23-01	599 38 46-64
AEG Electrolux	L14710VIT	914 60 12 24-01	599 38 46-66
ArthurMartinElux	AWW1227	914 60 31 00-00	599 38 00-01
ArthurMartinElux	AWW1427	914 60 31 01-00	599 37 98-67
ArthurMartinElux	AWW1525	914 60 31 03-00	599 38 11-83
Electrolux	EWD1409I	914 60 12 35-00	599 38 36-18
Electrolux	EWV1690	914 60 31 04-00	599 38 11-88
Electrolux	EWV1292	914 60 31 09-00	599 38 44-87
Electrolux	EWV1290	914 60 33 03-00	599 38 15-42
Electrolux	EWV1290	914 60 33 06-00	599 38 42-44
Elektro Helios	KT2250	914 60 32 03-00	599 38 08-89
Faure	FKF2126	914 60 32 00-00	599 38 14-13
John Lewis	JLWD1406	914 60 31 02-00	599 38 00-10
Rex-Electrolux	RIL7200	914 60 34 01-00	599 38 32-96
Rex-Electrolux	RIL7600	914 60 34 02-00	599 38 32-97
Tricity Bendix	TBWD1210	914 60 13 00-00	599 38 39-41
Tricity Bendix	WDR1041W	914 60 32 09-00	599 38 24-56
Tricity Bendix	WDR1241W	914 60 32 10-00	599 38 24-65
Zanussi	ZJD12191	914 60 12 18-01	599 38 46-62
Zanussi	UMBRIA	914 60 32 02-00	599 38 04-13
Zanussi	ZWW1202	914 60 32 08-00	599 38 15-10
Zanussi-Electrolux	ZWD1682W	914 60 22 00-00	599 38 24-66
Zanussi-Electrolux	ZWD1262W	914 60 32 04-00	599 38 00-19
Zanussi-Electrolux	ZWD1262S	914 60 32 05-00	599 38 11-99
Zanussi-Electrolux	ZWD1252W	914 60 32 07-00	599 38 23-61
Zanussi-Electrolux	ZWD1662W	914 60 32 11-00	599 38 36-35
Zanussi-Electrolux	ZWD1272W	914 60 33 00-00	599 38 00-23
Zanussi-Electrolux	ZWD1472W	914 60 33 01-00	599 38 04-07
Zanussi-Electrolux	ZWD1472S	914 60 33 02-00	599 38 08-93
Zoppas	PLA147D	914 60 34 00-00	599 38 40-90