


**MODIFICATION TO TURNTABLE DRIVE ON 24L AND 30L MICROWAVE OVENS  
FROM ELC 05**

For a quality improvement on microwave ovens produced by ElcoBrandt (France) with **ELC05** listed below, the rotation system of the turntable has been modified. This enables to:

- Reduce the noise level during the rotation.
- Increase the load on the turntable.
- Avoid positioning incorrectly the shaft.

**PREVIOUS SYSTEM**

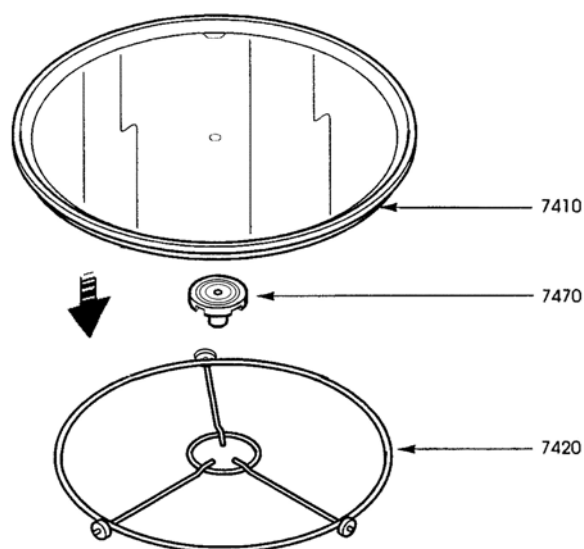

HDC00742.JPG

Fig. 1

POS.	PART NO.	DESCRIPTION
7410	899661 91 93-85/8	TURNTABLE
7470	5027 32 41-00/5 5027 44 70-00/9	SHAFT
7420	899661 91 93-86/6	TURNTABLE METALLIC SUPPORT

**KIT PART NO. 5028 00 04-00/8 OF THE NEW SYSTEM**

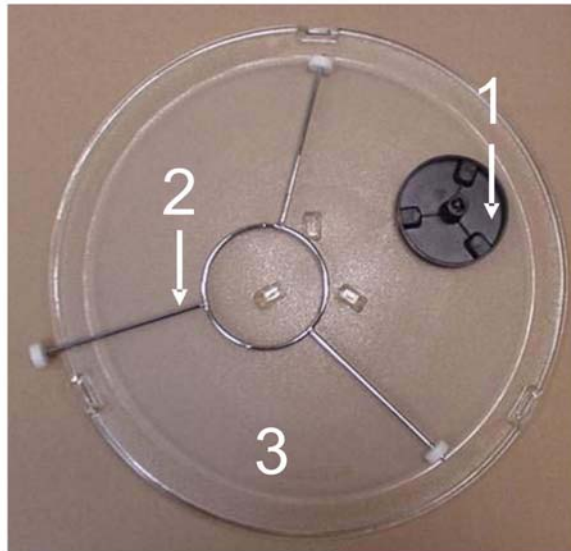


Fig. 1

HDC00743.JPG

- 1 - SHAFT
- 2 - TURNTABLE METALLIC SUPPORT
- 3 - TURNTABLE

- PART NO. 5028 00 03-00/0
- PART NO. 5028 00 02-00/2
- PART NO. 5028 00 01-00/4

See below the mounting sequence of the new system:



HDC00744.JPG

Fig. 2



HDC00745.JPG

Fig. 3




HDC00746.JPG

Fig. 4




HDC00747.JPG

Fig. 5

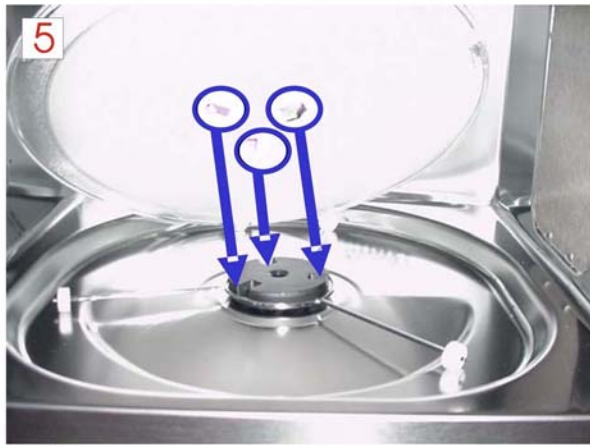

HDC00748.JPG

Fig. 6

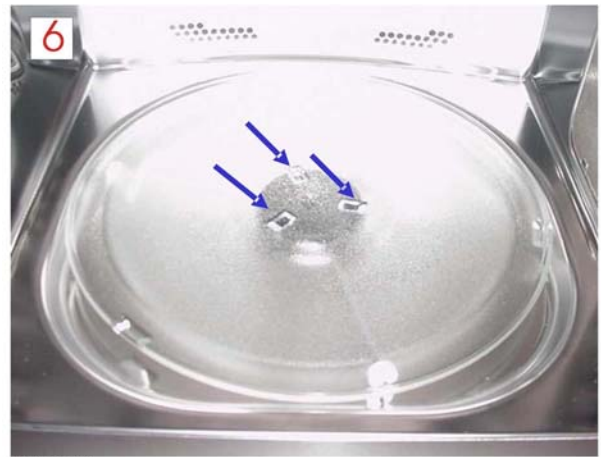

HDC00749.JPG

Fig. 7

**Note:** The single components of the previous system are not interchangeable with the new ones. In place of the previous components it is possible to use the kit part no. **5028 00 04-00/8** which includes the new turntable part no. 5028 00 01-00/4, the new shaft part no. 5028 00 03-00/0 and the new turntable metallic support part no. 5028 00 02-00/2.

Find below the affected models:

TABLE 1

PNC	PRODUCTION DATE	MODEL	BRAND	PUBLICATION NO.
94760224900	19991212	MC153E-W	AEG	599507219
94760225000	19991212	MC153E-B	AEG	599507219
94760225100	19991212	MC153E-D	AEG	599507219
94760225300	20000303	MC153E-W	AEG	599507646
94760225400	20000303	MC153E-B	AEG	599507646
94760225600	20000202	MC153E-W EXPORT	AEG	599507623
94760225700	20000202	MC153E-B EXPORT	AEG	599507623
94760225900	20000202	MCD3534E-W	AEG	599507387
94760226000	20000202	MCD3534E-B	AEG	599507387
94760226300	20000202	MCD3534E-W EXPORT	AEG	599507628
94760226500	20000202	MC153E-D EXPORT	AEG	599507623
94760226700	20001001	QN4038X	HUSQVARNA ELECTROLUX	599509351
94760226700	20030908	QN4038X	HUSQVARNA ELECTROLUX	599364338
94760227200	20000801	ZM24ST-X	ZANUSSI	599509231
94760227500	20000801	ZM24ST-K	ZANUSSI	599509231
94760228200	20010601	EMS2486C-WE	ELECTROLUX	599512053
94760228300	20010601	EMS2486C-SW	ELECTROLUX	599512053
94760228400	20010601	EMS2486C-CN	ELECTROLUX	599512053
94760228900	20001001	MO924G-NE	REX	599509410
94760229200	20001001	ZM24ST-W	ZANUSSI	599509392
94760229300	20001001	ZM24STX	ZANUSSI	599509392
94760230400	20001201	MC153EM	AEG	599507219
94760230500	20001201	MC153EM	AEG	599507646
94760230600	20001201	MC153EM	AEG	599507623
94760230800	20001201	MCD3534EM	AEG	599507387
94760230900	20001201	MCD3534EM	AEG	599507628
94760231500	20010401	MCC663 E-m	AEG	599510792
94760231502	20030102	MCC663E-M	AEG	599356180
94760231700	20010601	MCC663E-A	AEG	599512134
94760231702	20030102	MCC663E-AL	AEG	599346166
94760233600	20001001	ZM24ST-N	ZANUSSI	599509231
94760234400	20010601	ZMB30CST-W	ZANUSSI	599511587
94760234402	20030102	ZMB30CST-W	ZANUSSI	599356173
94760234600	20010601	ZMB30CST-X	ZANUSSI	599511587
94760234602	20030102	ZMB30CST-X	ZANUSSI	599356174
94760234900	20001101	ZM24STW	ZANUSSI	599509392
94760236100	20010601	QN4038W	HUSQVARNA ELECTROLUX	599512130
94760236100	20030908	QN4038W	HUSQVARNA ELECTROLUX	599364338
94760236200	20010601	QN4038K	HUSQVARNA ELECTROLUX	599512130
94760236200	20030908	QN4038K	HUSQVARNA ELECTROLUX	599364338
94760236800	20010801	EM2412-W	ARTUR MARTIN ELUX	599512355
94760236900	20010801	EM2412-B	ARTUR MARTIN ELUX	599512345
94760237000	20010801	EM2412-M	ARTUR MARTIN ELUX	599512345
94760237100	20010801	EG2428-W	ARTUR MARTIN ELUX	599512331

<b>PNC</b>	<b>PRODUCTION DATE</b>	<b>MODEL</b>	<b>BRAND</b>	<b>PUBLICATION NO.</b>
94760237200	20010801	EG2428-B	ARTUR MARTIN ELUX	599512331
94760237300	20010801	EG2428-M	ARTUR MARTIN ELUX	599512331
94760247500	20031121	MCD3534E-d	AEG	599361810
94760248200	20011201	MW2401-W	THERMA	599512952
94760248300	20011201	MW2401-B	THERMA	599512952
94760248400	20011201	MW2401-M	THERMA	599512952
94760250900	20021207	EMS2487W	ELECTROLUX	599356005
94760251000	20021207	EMS2487K	ELECTROLUX	599356006
94760251100	20021207	EMS2487X	ELECTROLUX	599356007
94760251200	20021207	EMS2487W	ELECTROLUX	599356008
94760251300	20021207	EMS2487B	ELECTROLUX	599356009
94760251400	20021207	EMS2487X	ELECTROLUX	599356010
94760252500	20030131	QN4039W	HUSQVARNA ELECTROLUX	599356627
94760252600	20030131	QN4039K	HUSQVARNA ELECTROLUX	599356628
94760252700	20030131	QN4039X	HUSQVARNA ELECTROLUX	599356630
94760253800	20040401	MCC663Ew	AEG	599358067
94760253900	20030401	MCC663Eb	AEG	599358070
94760254000	20030401	MCC663Em	AEG	599358072
94760254100	20030401	MCC663Eal	AEG	599358075
94760254200	20030401	MCC663Ew/UK	AEG	599358076
94760254300	20030401	MCC663Eb/UK	AEG	599358077
94760254400	20030401	MCC663Em/UK	AEG	599358079
94760254700	20030328	ZMB30CST-N	ZANUSSI	599358080
94760254800	20030328	ZMB30CST-X	ZANUSSI	599367999
94760254900	20030401	MCC663Eal/UK	AEG	599358083
94760255700	20031121	EMS2487K	ELECTROLUX	599361809
94760257300	20031121	JMW2060E	JUNO ELECTROLUX	599361817
94760257500	20031121	JMW9160A	JUNO ELECTROLUX	599361819
94760258600	20031215	MC2460EM	AEG	599362231
94760258700	20031215	MC2460EW	AEG	599362231
94760258800	20031215	MC2460ED	AEG	599362231
94760259500	20031222	MCD2460EM	AEG	599362256
94760259600	20031222	MCD2460EW	AEG	599362256
94760259700	20031222	MCD2460ED	AEG	599362256
94760259800	20031222	MCC3060EM	AEG	599362257
94760259900	20031222	MCC3060EA	AEG	599362257
94760260100	20030728	MOA4224-HV	VOSS	599360181
94760260200	20030728	MOA4224-RF	VOSS	599360182
94760260300	20040216	EMS2487U	ELECTROLUX	599363044
94760260400	20031121	MC153EA	AEG	599361815
94760262300	20040106	MO924GXE	REX ELECTROLUX	599362571
94760262700	20040216	EMS2488X	ELECTROLUX	599363041